



Installation, Operating and Servicing Instructions

Seal Ambient Merchandisers C6A/75B, C6A/75S, C6A/100B, C6A/100S

Please make a note of your product details for
future use:

Date Purchased: _____

Model Number: _____

Serial Number: _____

Dealer: _____



CONTENTS

Important Information	2
Warnings and Precautions	3
Technical Data	3
Checklist of Enclosures	3
Installation and Commissioning	3-4
Operating Instructions	4
Cleaning	4
Servicing, Maintenance and Component Replacement	5
Fault Finding	5
Spare Parts List	5
Service Information and Guarantee	6

IMPORTANT INFORMATION



Read these instructions carefully before using this product, paying particular attention to all sections that carry warning symbols, caution symbols and notices. Ensure that these are understood at all times.



 
WARNING!

This symbol is used whenever there is a risk of personal injury.



CAUTION!

This symbol is used whenever there is a risk of damaging your Lincat product.



NOTE:

This symbol is used to provide additional information, hints and tips.

KEEP THIS MANUAL FOR FUTURE REFERENCE

WARNINGS AND PRECAUTIONS



This appliance must be Installed, Commissioned and Serviced by a qualified person in accordance with national and local regulations in force in the country of installation.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified person.

Ensure that the plug/socket is accessible at all times.

Strip plastic coating and clean the appliance before use.

Disconnect this appliance before servicing, maintenance or cleaning.

TECHNICAL DATA

	C6A/75	C6A/100
Height (mm)		755
Width (mm)	750	1000
Depth (mm)		650
Weight (kg)	41.7	51.5
Volume (l)	284	380
Power rating (W)		18

CHECK LIST OF ENCLOSURES

Warranty card
Instructions manual
2 x shelves
3mm Allen key

INSTALLATION AND COMMISSIONING

This appliance must be earthed.



An equipotential bonding terminal is provided to allow cross bonding with other equipment.

If replacing the plug connect the terminals as follows:

Green and Yellow wire	Earth	E
Blue wire	Neutral	N
Brown wire	Live	L

Supply cords shall be oil resistant, sheathed flexible cable not lighter than ordinary polychloroprene or equivalent elastomer sheathed cord (code 60245 IEC 57)

Install this appliance on a level surface.

OPERATING INSTRUCTIONS

Only qualified or trained personnel should use this appliance.

Ensure the base plates lay flat within the base, and the shelves are secure. Connect the appliance to the electricity supply and switch on the light using the green switch.

Adjusting the shelf positions



Disconnect from the electricity supply. Slide the doors to the middle and lift up and out of the runners to remove. Lift and rotate the shelves to remove. Use the Allen key provided to adjust the shelf supports – at the front remove the two screws and replace in the appropriate holes, at the rear the screws are located behind the cable panel. Carefully remove the cable panel first and then reposition the rear shelf supports. Replace the cable panel ensuring the cable is not trapped.

CLEANING



Do not use a water jet or steam cleaner, and do not immerse this appliance.

Remove the rear doors, shelves and base plates. Brush the crumbs into the tray.

Shelves, shelf supports and base trays may be washed in a dishwasher, clean all other panels with warm water and mild detergent, do not use abrasive materials. Dry with a soft cloth.

SERVICING, MAINTENANCE AND COMPONENT REPLACEMENT

Replacing a light bulb

Disconnect from the electricity supply and ensure the bulb is cool to touch.

Using the Allen key provided remove the end caps from the light unit. Remove the diffuser from the clips. Remove the tube by carefully rotating 90° and slowly ease down until it is released. Replace the starter at the same time – to remove the starter rotate it clockwise. Reverse the sequence to fit the new tube.

All other servicing, maintenance and component replacement on this appliance should be carried out by one of our recommended service engineers.

FAULT FINDING

Please refer to the Service Help Desk number on the final page of this manual.

SPARE PARTS LIST

Part Number	Description	Used on
BU171	Light tube	All
BP28	Front base plate	75 models
BP29	Rear base plate	
BP30	Front base plate	100 models
BP31	Rear base plate	
GL68	Lamp starter	All
S/M0085	Self service door knob	S models
SH97	Shelf	75 models
SH98	Shelf	100 models

SERVICE INFORMATION

For help with the installation, maintenance and use of your **Lincat** equipment, please contact our service department:

☎ UK: 01522 875520

For non-UK customers, please contact your local Lincat dealer

All service work, other than routine cleaning should be carried out by one of our authorised service agents. We cannot accept responsibility for work carried out by other persons.

To ensure your service enquiry is handled as efficiently as possible, please tell us:

- Brief details of the problem
 - Product code
 - Type number
 - Serial number
- } All available on serial plate

Lincat reserve the right to carry out any work under warranty, given reasonable access to the appliance, during normal working hours, Monday to Friday, 08:30 to 17:00.

GUARANTEE

This unit carries a comprehensive UK mainland 2 year warranty. The guarantee is in addition to, and does not diminish your statutory or legal rights.

The guarantee does not cover:

- Accidental damage, misuse or use not in accordance with the manufacturer's instructions
- Consumable items (such as filters, glass, bulbs, slot toaster elements and door seals.)
- Damage due to incorrect installation, modification, unauthorised service work or damage due to scale, food debris build-up, etc.

The manufacturer disclaims any liability for incidental, or consequential damages. Attendance is based on reasonable access to the appliance to allow the authorised technician to carry out the warranty work.

Service calls to equipment under warranty will be carried out in accordance with the conditions of sale. Unless otherwise specified, a maximum of 15 minutes of administrative time, not spent directly carrying out servicing work, is provided for within the warranty. Any requirement for staff attending the call to spend greater time than 15 minutes due to administrative requirements, such as on health and safety risk assessments, will be chargeable at the prevailing rate.